



Fitting Instructions

1. Remove rubber seals from aluminium section. Close the door to which the deflector is to be fitted and measure the distance between the doorframe rebates on the outside (see illustration).

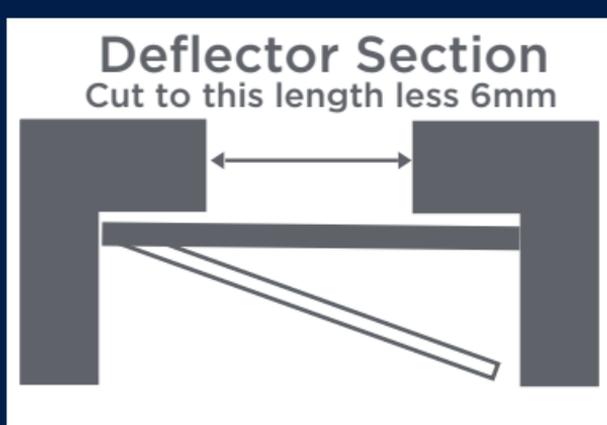

2. Using a fine toothed hacksaw, cut the aluminium 6mm shorter to allow for protective weather deflecting end caps.
3. Cut rubber seals to length, insert seals and carefully install end caps on to the deflector. This must be done before the deflector is fitted to the door.
4. Now screw into position, ensuring that the sealing blade lightly contacts the threshold when the door is closed. Ensure fixing screws are inserted within 25mm (1") of the edges of the door.

Drill extra holes if necessary.

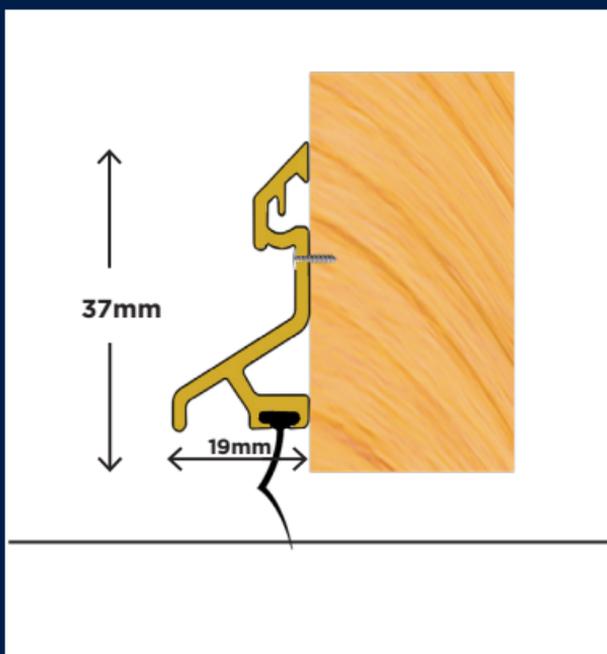

Exitex™

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com