



Fitting Instructions

1. Remove rubber seals from aluminium sill section. Measure width between inside faces of the doorframe rebate and cut aluminium section to this size (see illustration).

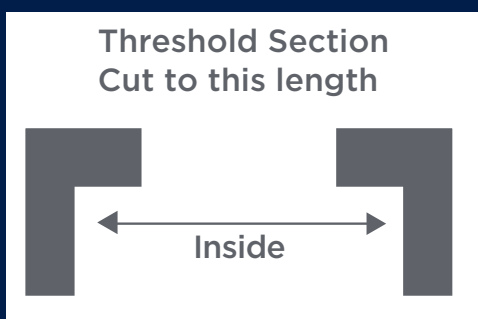

2. Notch front corners of the Threshex sill to fit it neatly around the doorframe.
3. Cut rubber seals to length and insert into aluminium. The diagram on the front of the label shows the direction of the seal for inward opening doors. For outward opening doors the rubber seal must be reversed.
4. This sill requires an underdoor clearance of 17mm. If necessary, remove door and trim to allow for this, ensuring bottom of door is smooth to avoid damage to rubber seal.
5. Position the assembled sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
6. Apply sealing compound (Exitex Elast-O-Sealant) to underside groove at front and back of sill and screw sill into place.

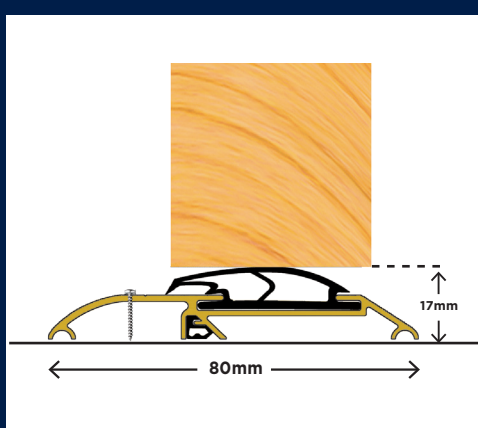

Exitex™

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com